

AR-M9936 Serial Manual

Version 1.01

1. System Setting


- The AR-M9936 has in the front site Power Button, 4 LAN connector with build in LED, 2 USB Port, COM port, Reset button and LCD Panel (only for AR-M9936-G). Beside that, the backside board has AC power connector.

1.1 Discrimination (included Rubber Foot)


Description	AR-M9936
CPU Board	AR-B1893
Dimensions	440x210x44 (mm)

1.2 Main System

(1) Dimension

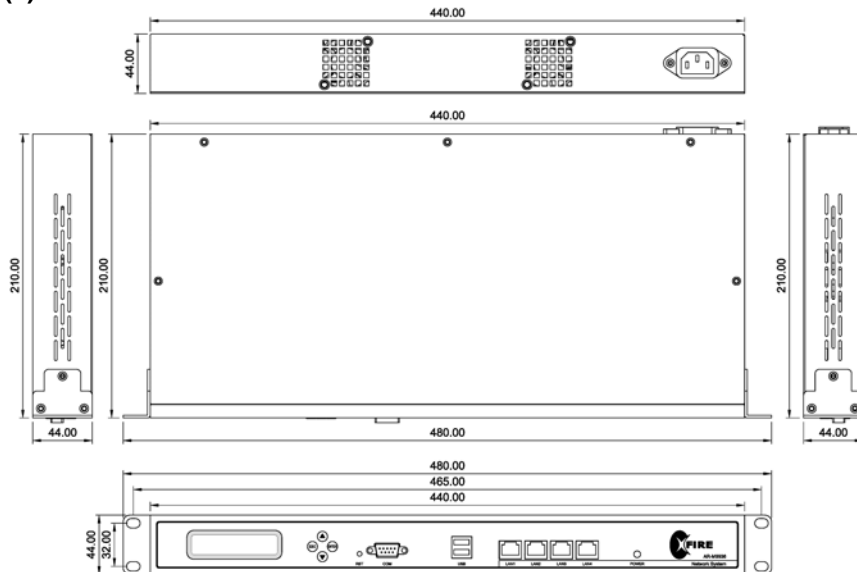

 (2) Outlet (front side board)




(3) Outlet (back side board)



2. Fabrication way

- Please remove the mounting screw at the cover, and then open up the cover.
- Please let the fixed nut of CPU board loose and remove it. At this time, user can plug CF card and DDRAM SODIMM into CPU board.
- Place the CPU board at the original site and then firmly fixed it by the fixed nut.
- Place ATX Power Board on right site and connect the ATX power Cable to Board.
- Inside H.D.D are place into the bracket of H.D.D and attach the H.D.D. IDE Cable.
- Finally, remove the screw cover and lock it into the base.

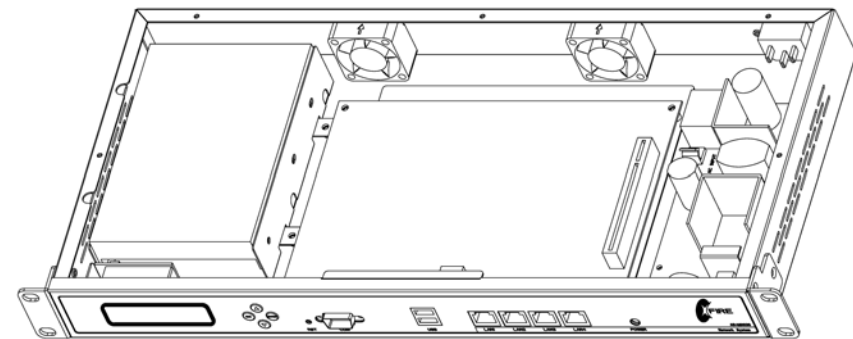

3. ATX Power Supply

- Input Range: 100 ~ 240 VAC
- Frequency: 47 ~ 63 Hz
- Max Power: 60 W
- Short circuit protection
- Overload protection